

MONTAGEANLEITUNG

 MONTAGEANLEITUNG
 ASSEMBLY INSTRUCTION
 DE INSTRUCTIE VAN DE ASSEMBLAGE
 ISTRUZIONE DELL'ASSEMBLEA
 INSTRUCCIÓN DE ASAMBLEA
 INSTRUCTION DE MONTAGE
 NÁVOD K MONTÁŽI
 MONTERINGSANVISNING

 MONTAJ TALIMATI
 ASENNUŠOJE
 BRUGSANVISNING
 BRUKSANVISNING
 UPUTE ZA MONTAŽU
 NAVODILA ZA MONTAŽO
 SZERELÉSI ÚTMUTATÓ
 INSTRUCTIUNI DE MONTAJ



Modell-Nr.

12530

Friedrich Küpper GmbH
 Friedrich-Küpper-Weg
 54570 Berlingen
 Deutschland

Telefon +49 (0) 65 91 - 95 42 0
 Telefax +49 (0) 65 91 - 95 42 17
 E-Mail info@friedrich-kuepper-gmbh.de
 Internet www.friedrich-kuepper-gmbh.de

ART.-NR. FRONT KORPUS

12531

Grün

Silber

12532

Rot (ähnl. RAL 3002)

Silber

12534

Blau

Silber

12537

Ultramarinblau
(RAL 5002)

Silber

12536

Silber

Schwarz

EINZELTEILE / PIECES

A

1x

772 mm x 475 mm



B

1x

772 mm x 475 mm



C

1x

548 mm x 473 mm



D

1x

548 mm x 473 mm



E

1x


474 mm x 480 mm



H

4x


450 mm x 445 mm

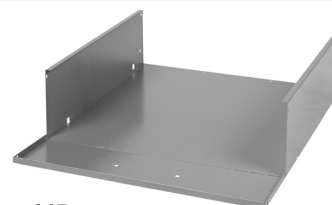

I

4x


470 mm x 130 mm

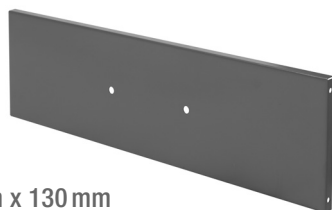

J

4x

450 mm x 120 mm

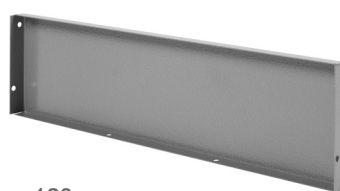

P

1x

775 mm x 470 mm



Y

1x

1200 mm x 600 mm




X

4x


450 mm x 20 mm




BEUTELINHALT / BAG CONTENT

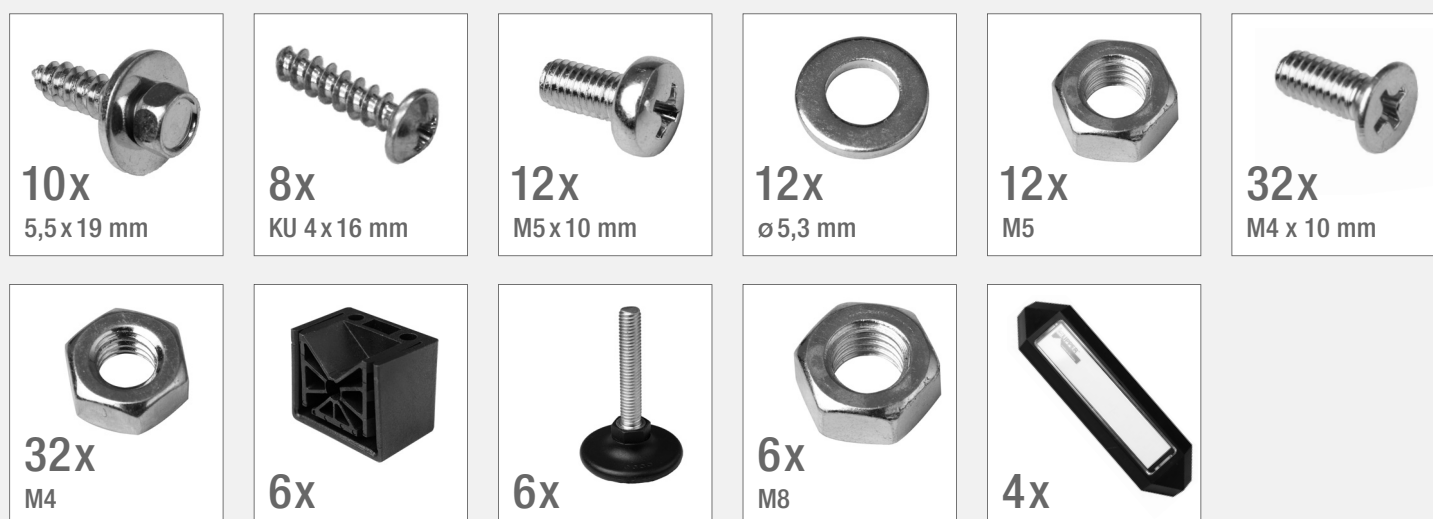

BENÖTIGTES WERKZEUG / NEEDED TOOLS

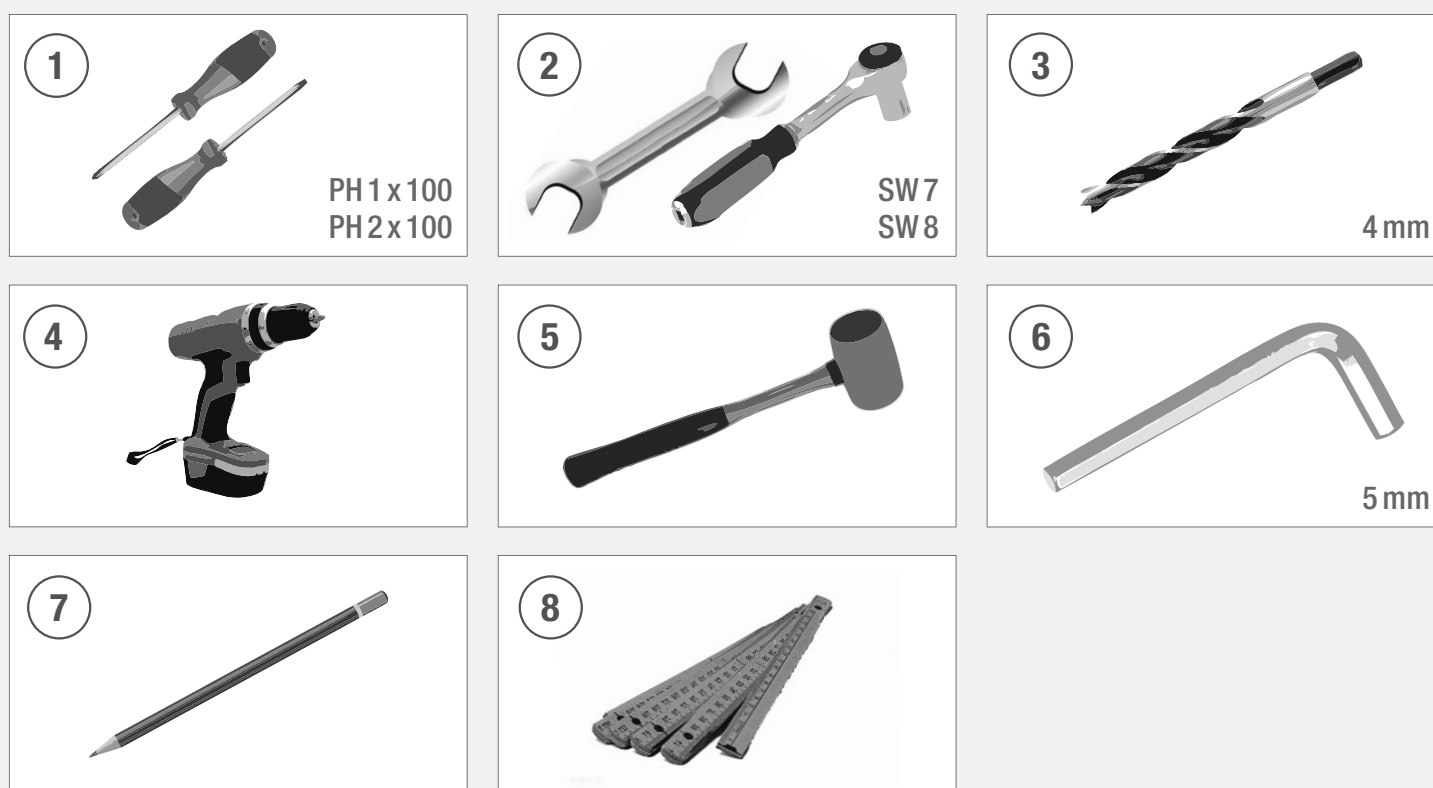

1.

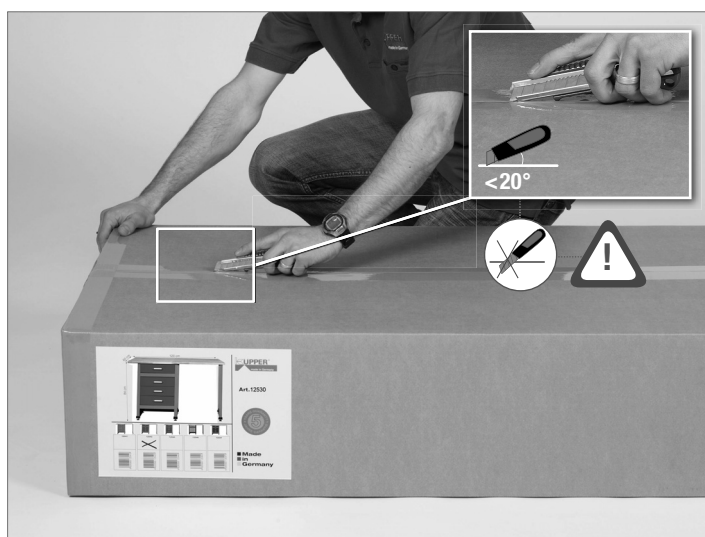

2.


2x M5

2x M5 x 10

2x 5,3 MM

② SW 8

① PH 2 X 100

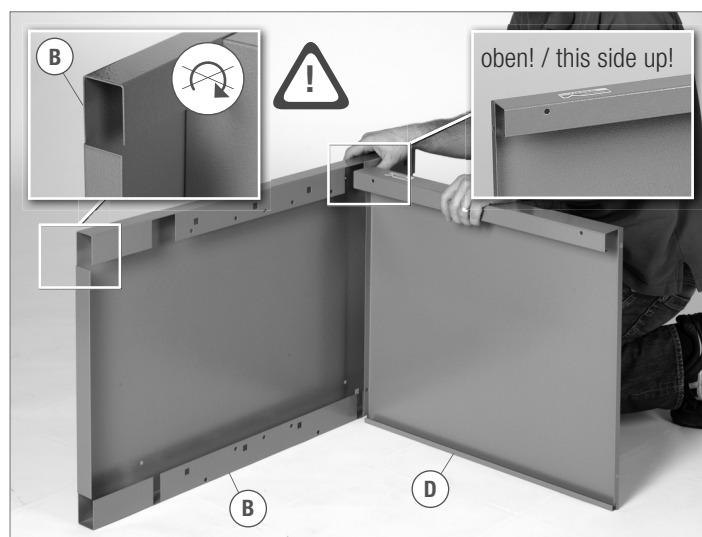

3.


2x M5

2x M5 x 10

2x 5,3 MM


② SW 8

① PH 2 X 100

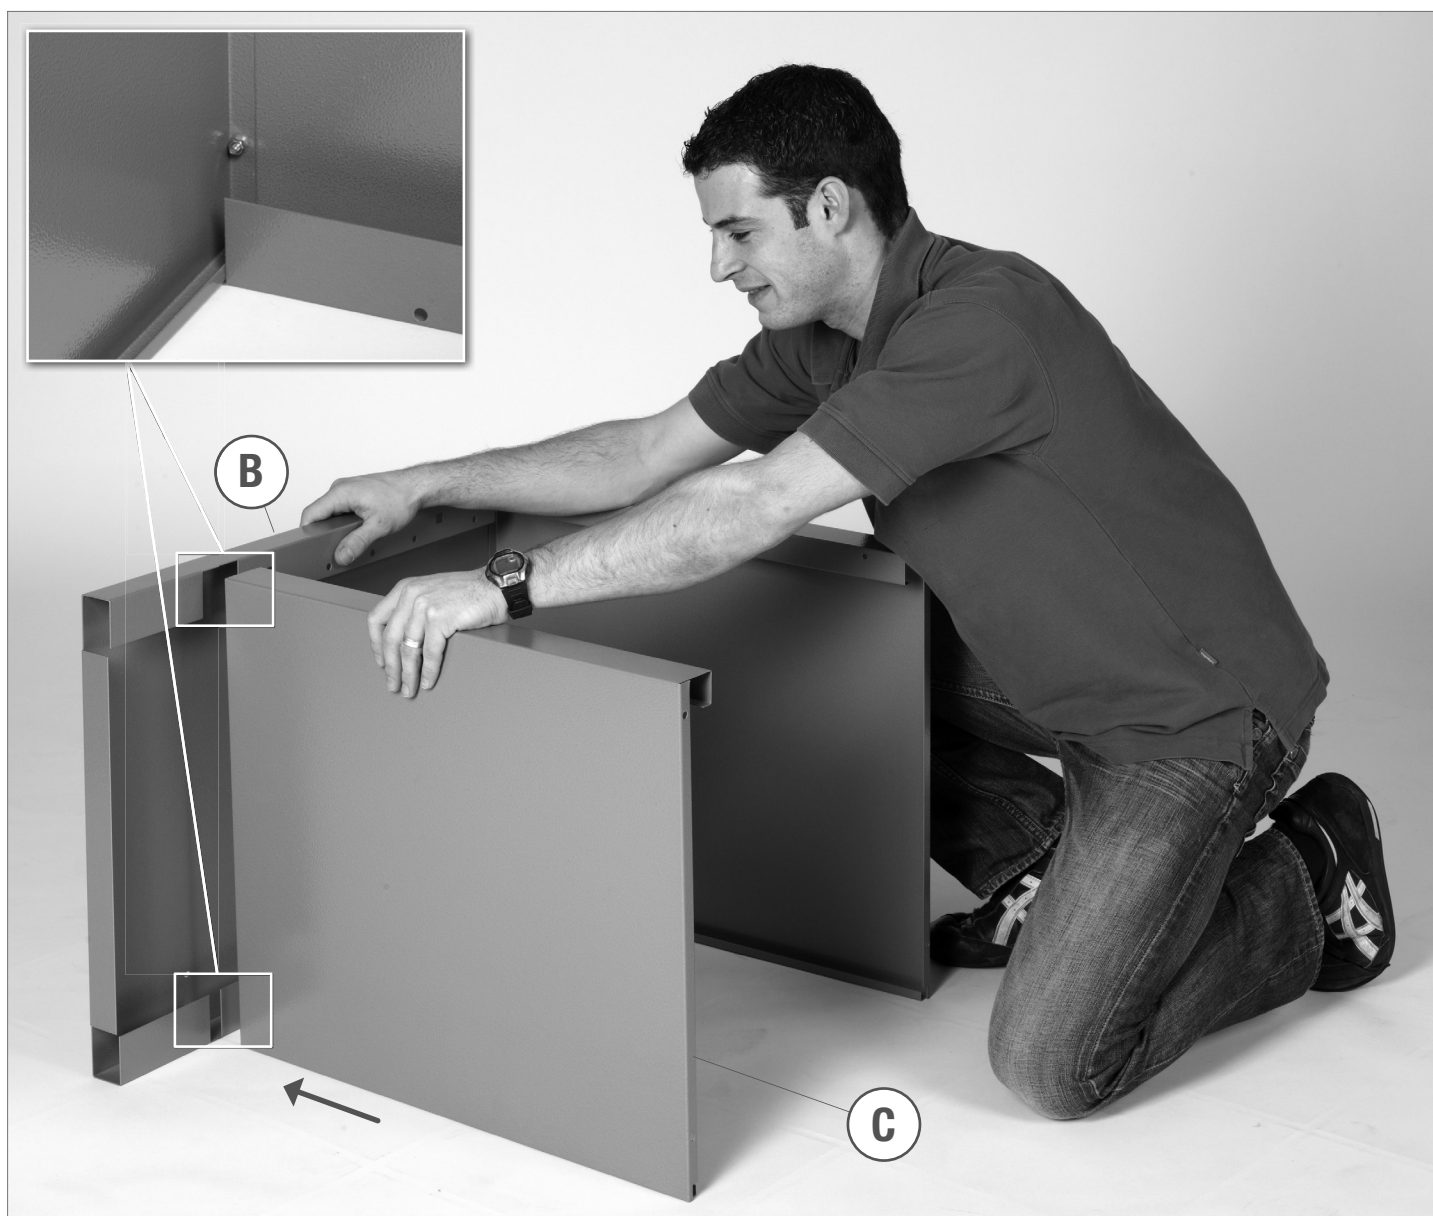


4. 2x M5 2x M5x10 2x 5,3 MM

② SW 8 ① PH 2X100

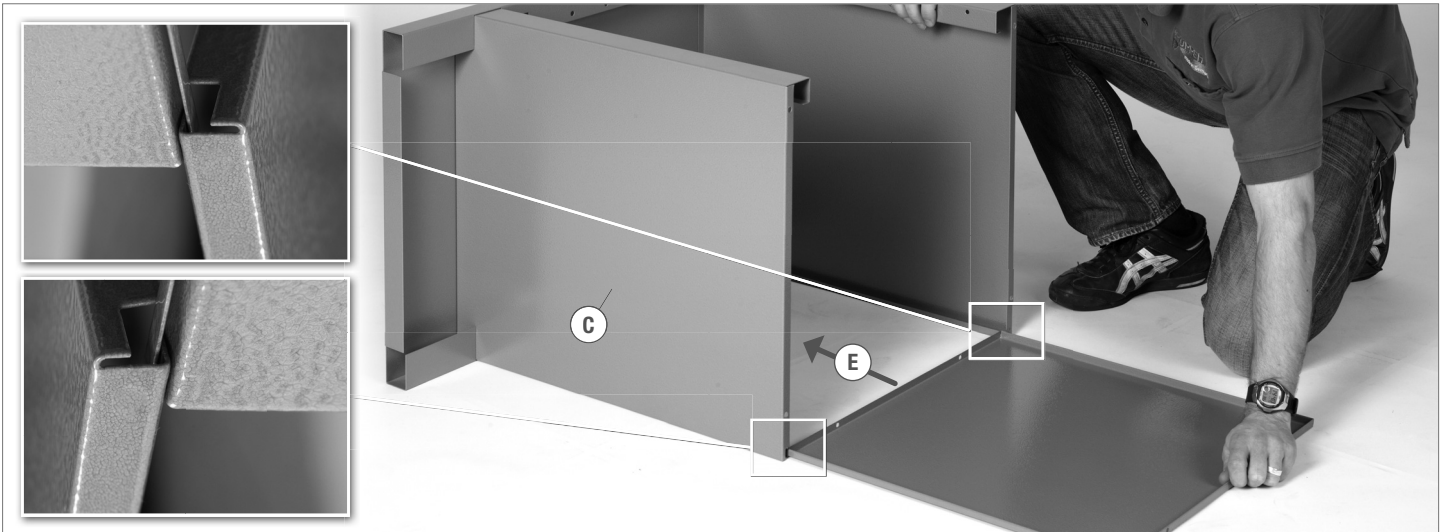


5. 6x M5 6x M5x10 6x 5,3 MM ② SW 8 ① PH 2X100

6. 4x M8 4x 4x ⑤

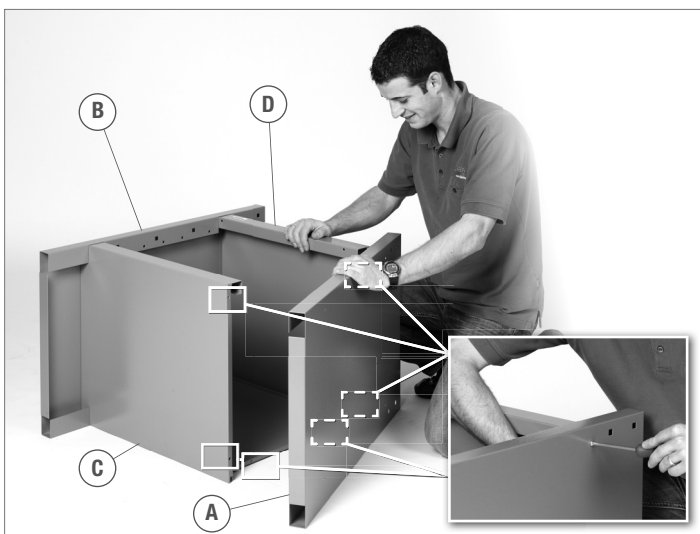


7. ④ 4x CR


8. ④ 4x CL

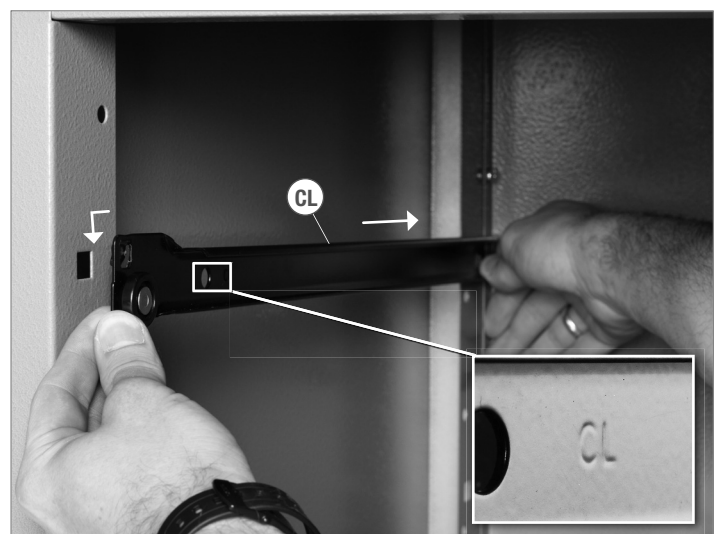

9.  2x M8  2x  2x  5

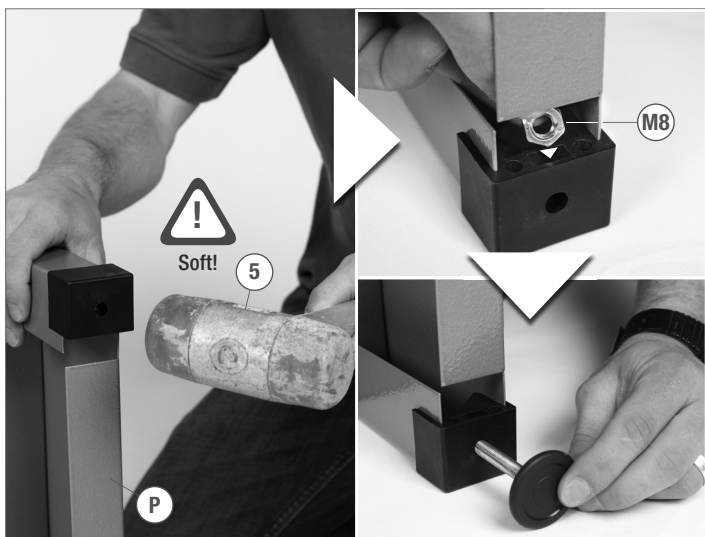

10.  8  7

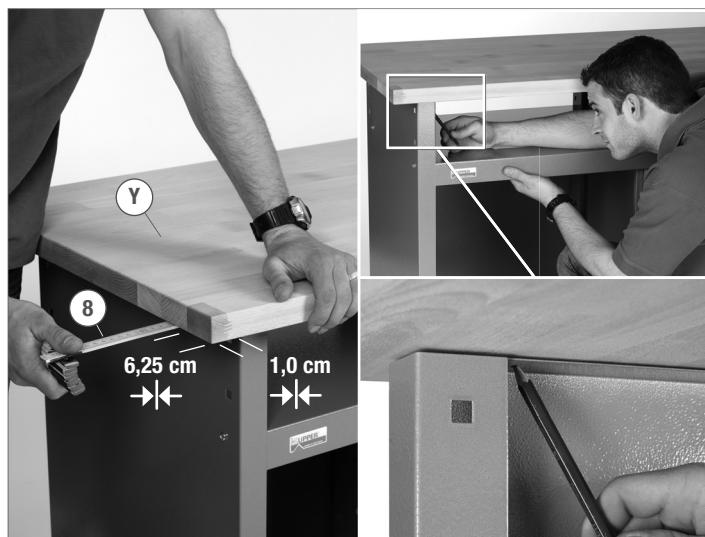


11.  8  7




12.  4  3



13.  10x 5,5 x 19  2 SW 8  2 SW 8

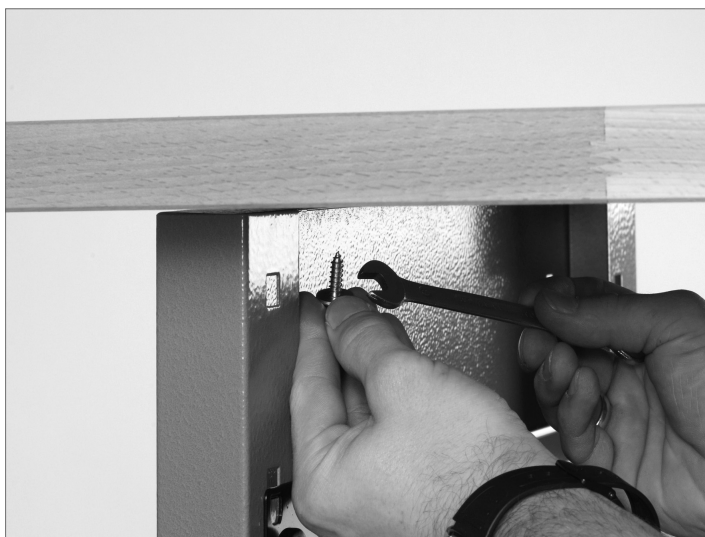


14.  8x M4  8x M4 x 10  2 SW 7  1 PH 1 X 100

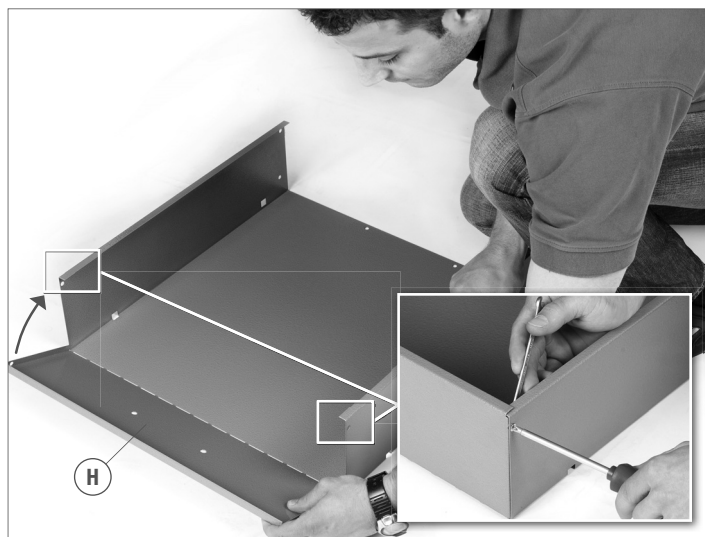


15. 24x M4 24x M4x10


② SW7 ① PH1X100

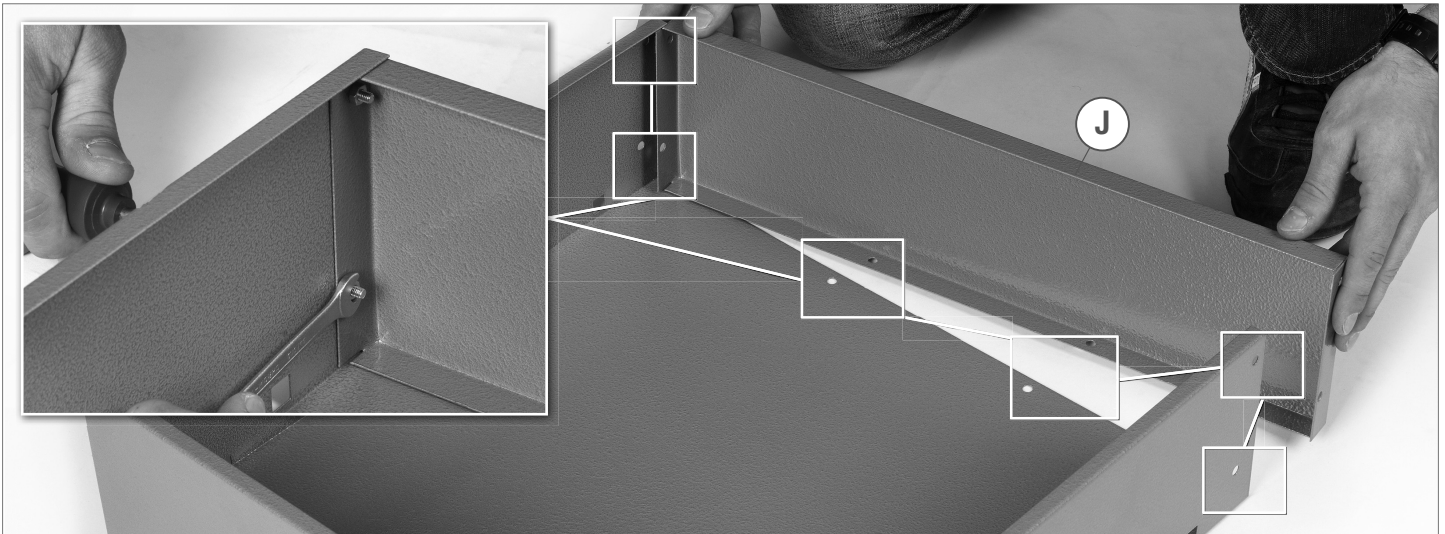

16.

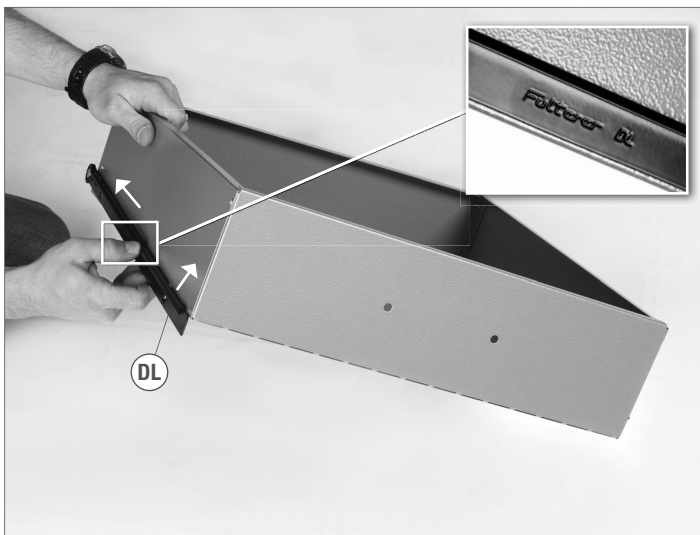

17.

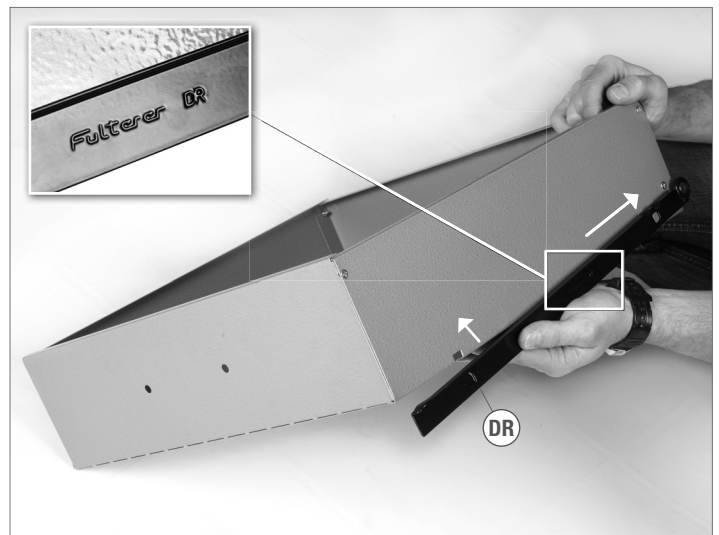

18. 8x KU 4x 16 4x ① PH2X100



19.





Modell-Nr.

12530